



Polo Skid Bar stool

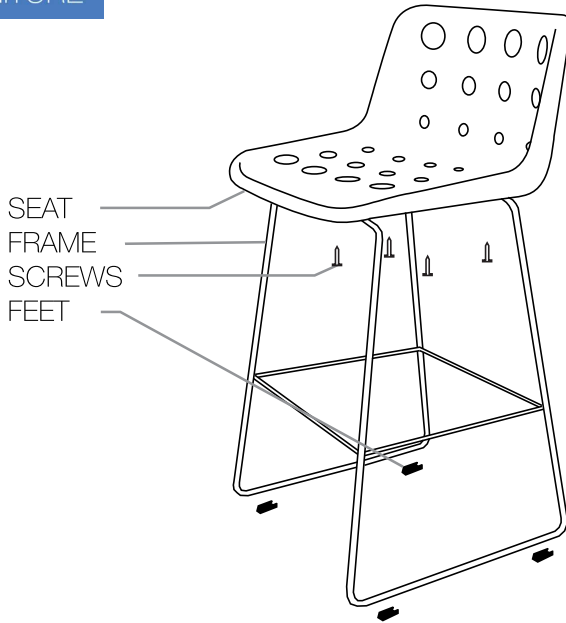


TOOLS;

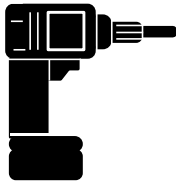

Electronic
screwdriver/
Drill set



PZ3 Bit

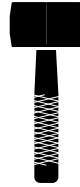

Rubber
Mallet



25mm
Screws
(Provided)



4 x Feet
(Provided)

NB. Assembly should be carried out on a soft surface or mat to protect the product.

1. Place frame upside down.
2. Position feet (x4) in upright ends of the frame and knock into place using a rubber mallet.
3. Place seat shell upside down.
4. Place frame on top of seat shell, lining up 4 fixing holes.
5. Manually twist screw fixings into place.
6. Tighten using an electronic screwdriver or drill set to appropriate torque setting, taking care not to overtighten.

You have completed the assembly, turn over and enjoy your chair